




Portable air conditioner – Clima 12 Operating Instructions

Also called – Mobile air conditioner, Room air conditioner, portable cooler, split portable, comfort cooler

Please take a few minutes to read these operating instructions before attempting to use the Clima 12 mobile Air Conditioner.

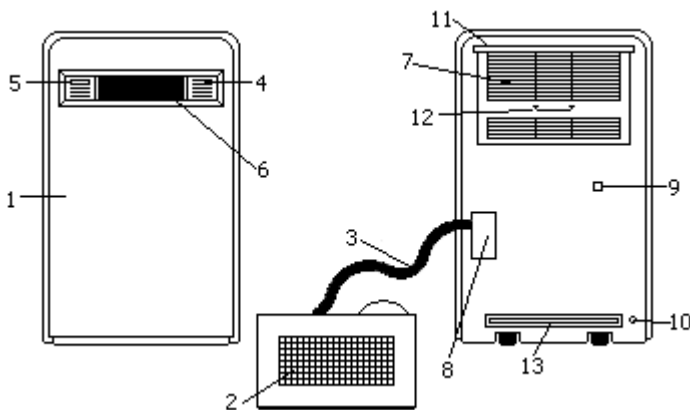

1. Inside unit
2. Outside unit
3. Connecting hose
4. Function control panel
5. Temperature control
6. Front cooled air grille
7. Air filter
8. Cover for quick connections
9. On / Off switch
10. Moisture emptying tube and plug
11. Carrying handle
12. Outside attachment handle
13. Support for outside unit


Positioning and Installing

- The indoor unit should be positioned so that its back is at least 20cm from any obstacle (curtain, wall, etc) that could prevent good air flow through the rear intake grille and its filter.
- Nothing should obstruct the cooled air flow from the front grille.
- The outdoor unit, as its name implies, must be placed outside the room to be cooled. Good locations are window sills, balconies etc

CAUTION: NEVER HANG THE OUTDOOR UNIT BY CONNECTING HOSE WITHOUT OTHER SUPPORTS

Air conditioner controls

1. Lighted display
2. Start / stop programming key
3. Time forward key
4. Time back key
5. Temperature increase key
6. Temperature decrease key
7. Fan high speed select key
8. Fan low speed and Automatic fan speed selector
9. Cooling select key
10. Heating select key (if heating installed)
11. Programmer on / off key

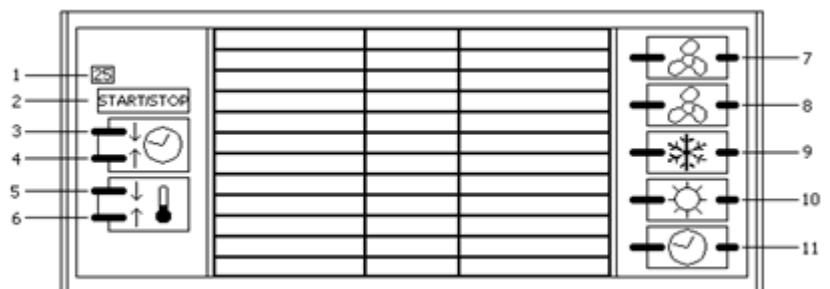

Selecting room Air Conditioner Function

Starting the unit

- Press the on/off switch, select low or high fan speed by means of the special keys

Regulating the thermostat (temperature)


- As soon as the mobile air conditioner has been switched on from the toggle switch at the rear, the display on the control panel will show the temperature set (this will usually be different from the actual room temperature).
- Use the keys 5 and 6 to increase or decrease this.
- To prevent unnecessary strain in the internal components it is good practice to set the temperature before selecting the operational mode

Comfort Cooling

- Press the on/off lighted toggle switch on the back of the air conditioner
- Set the thermostat to the temperature you want
- Set the fan speed on low or high or on automatic fan speed.
- Press the cooling key 9

Cleaning the Air Filters

The air will trap impurities in the air such as dust, hair particles etc and should be cleaned. We recommend that you clean the filter at least once a week. For removing and cleaning filters, lift the upper edge of the filter until it comes off its seat. Use a jet of water to clean the filter. Shake off excess water before refitting the air filter.

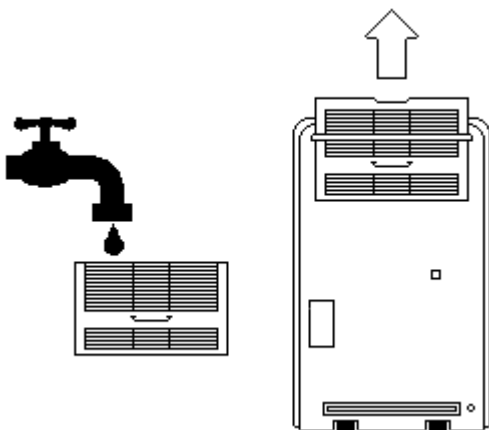

London Cool 0800 440 444
Portable air conditioner rental, sales and hire
Fixed installations, dehumidifiers and heaters

This document has been compiled in good faith, but no representation is made or warranty given (either express or implied) as to the completeness or accuracy of this information