



## 30" Slim drum fan (EH0134)

---

### Important

These instructions should be read carefully and left with the user of the product for future reference.

### Operation

- 1) Plug the mains lead into a 13amp mains socket
- 2) If connecting via an extension lead, make sure that the lead is rated at 6amps or more, and that it is fully unwound
- 3) Tilt the fan to the required angle
- 4) Switch the appliance on at the mains socket
- 5) Turn the rotary switch to select the required speed: High Speed = 17100 m<sup>3</sup>/hr airflow, Low Speed = 15780 m<sup>3</sup>/hr airflow
- 6) It is normal for the motor to become warm in normal use
- 7) Unplug the appliance from the mains when not in use

### Product safety

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children shall not play with the appliance.  
Cleaning and user maintenance shall not be made by children without supervision.

Do not use in close proximity to gas appliances.

This unit is for indoor use only.

Do not cover when in use.

Do not place the mains lead beneath a carpet or rug.

Do not use the appliance in locations where paint, petrol or other flammable liquids are used or stored.

Do not insert any object into the appliance through the grilles. This may damage the appliance or result in overheating or electric shock.

Do not use this appliance in the immediate surroundings of a bath, a shower or a swimming pool.

The appliance is fitted with an overload cut-out which will operate if the motor overheats or is stalled. If this happens, disconnect from the mains supply immediately, and allow the motor to cool down.

### Operating costs

At the time of going to press, the average cost of electricity is 11p per unit (kW/hr.). The amount you are being charged will be shown on your electricity bill. At this cost, the fan will cost 3.5p per hour to run on the 'LOW SPEED' setting or 4.5p per hour on the 'HIGH SPEED' setting.

### Maintenance

Before cleaning, turn the appliance off and disconnect from the mains supply.

The appliance may then be cleaned using a damp cloth with a drop of washing up liquid to remove any dust or dirt from the casing. Do not use any stronger detergents or solvents as these may damage the finish.

Using a dry paintbrush, remove any dust from the grills.

If the mains supply lead is damaged, it must be replaced by the manufacturer or London Cool.